

## **DIVISION CONTROLLERS**

DIVISION CONTROLLERS program is a special software that allows you to check the performance of the system DIVISION controllers, and also assign addresses to controllers, according to the project created in DIVISION CONSTRUCTOR program.

Connect DIVISION system controller to the PC on which the DIVISION CONTROLLERS program is installed, using a converter USB/RS485. Don't forget to supply 12V power to the controller.

Start the DIVISION CONTROLLERS program.

If you know which COM port the controller is connected to, select it from the appeared list "Search for devices", otherwise leave the item "Auto search". Click the "Start Search" button. You can stop the search at any time by clicking the "Cancel" button.

«The list of found controllers» table will display controllers connected to the PC. Click on the line with the desired controller to start working with it. Use the help information for working with each controller, located on the right side of the program window DIVISION CONTROLLERS.

Note: do not connect controllers with the same addresses to the same COM port.